

Model 1200	<u>5</u> -1001 until 1965, <u>65</u> - until 1968, <u>820V</u> or S--- until 1978, then <u>7820V</u> or S---	1955
	<u>Tilting Arbor Saw</u>	
Model 62	<u>4</u> -100 until 1968, <u>862</u> --- until 1978, then <u>7862</u> ---	1964
Model 65	<u>5</u> -100 until 1965, then <u>65</u> -	1955
Model 66	<u>66</u> -101 until 1968, <u>866</u> --- until 1968, then <u>7866</u> ---	1965
Model 70	<u>1001</u> until 1955, then <u>5</u> - until 0-600	1954
Model 71	0-600	1960
Model 72	<u>8</u> -100 until 1968, <u>872</u> --- until 1978, then <u>7872</u> ---	
Model 68	<u>268</u> --- until 1978, then <u>7868</u> ---	
	<u>Wood Band Saws</u>	
Model 140	<u>5</u> -1000	1955
Model 141	<u>1</u> -101 until 1968, <u>841</u> --- until 1978, then <u>7841</u> ---	1961
Model 80	<u>5</u> -1000	1955
Model 81	<u>0</u> -100 until 1968, <u>881</u> --- until 1978, then <u>7881</u> ---	1960
	<u>Metal Band Saws</u>	
Model 143	<u>1</u> -101 until 1968, <u>843</u> --- until 1978, then <u>7843</u> ---	1961
Model 83(friction cutting)	No serial numbers	1960
Model 85	No serial numbers	1958
Model 86	<u>9</u> -100	1959
Model 87	<u>0</u> -1729 until 1968, <u>887</u> --- until 1968 then <u>7887</u> ---	1960
Model 88	<u>488</u> --- until 1978, then <u>7888</u> ---	1974
Model 89	<u>989</u> ---	1969
Model 2	<u>5</u> -102 until 1968, then <u>802</u> ---	1965
Model 5	<u>4</u> -101 until 1968, then <u>805</u> ---	1964
Model 6	<u>006</u> ---	1970
Model 8	<u>4</u> -101 until 1968, then <u>808</u> ---	1964
	<u>12" Planers</u>	
Model 12	No serial numbers until 6/1950	1948
Model 100	<u>6200</u> until 1955, <u>5</u> - until 1965, <u>65</u> - until 1968, <u>1955</u> <u>800</u> --- until 1978, then <u>7800</u> ---	
	<u>16" Planers</u>	
Model CE 16	No serial numbers	
Model CD 16	No serial numbers	
Model CS 16	No serial numbers	
Model E 16	<u>7001</u>	
Model 160	<u>0</u> -to 1968, <u>860</u> ---, then <u>7860</u> ---in 1978	1960
	<u>18" Planers</u>	
Model 180	<u>1</u> -101 up until 1968, <u>880</u> --- until 1978, then <u>7880</u> ---	1961

2

<u>SERIAL NUMBER SEQUENCE</u>		
<u>Single End Tenoner</u>		
Model 2A	No serial numbers	1948
Model 2A	<u>1001</u> until 1955, <u>5</u> - until 1965, <u>65</u> - until 1968, <u>828</u> --- until 1978, then <u>7828</u> ---	1953
<u>Mortisers</u>		
Model 2A chain	No serial numbers	1948
Model 15 chain	<u>2000</u> until 1955, <u>5</u> - until 1965, <u>65</u> - until 1968, <u>832</u> --- until 1978, then <u>7832</u> ---	1953
Model 30 hyd. chain	No serial numbers	1955
40 hyd.	No serial numbers	1956
41 hyd. chain	No serial numbers	1960
Model 10 hollow chisel	<u>2001</u> until 1955, <u>5</u> - until 1965, <u>65</u> - until 1968, <u>840</u> --- until 1978, then <u>7840</u> ---	1957
Model 5 hyd. chisel	No record of serial numbers	1955
<u>Wood Lathes</u>		
Model 45	<u>5</u> -1000 until 1968, <u>845</u> --- until 1978, then <u>7845</u> ---	1960
Model 90	<u>0</u> -1000 until 1968, <u>890</u> --- until 1978 then <u>7890</u> ---	1955
<u>Jointers</u>		
Model 50 (6")	<u>1100</u> -up <u>0</u> - in 1960, <u>65</u> - in 1965 until 1968, <u>850</u> --- until 1978, then <u>7850</u> ---	1955
Model 60 (8")	<u>3000</u> -up until 1960, <u>0</u> - until 1968, <u>861</u> until 1978, then <u>7861</u>	1957
<u>Scroll Saw</u>		
Model 95	<u>1</u> -101 until 1968, <u>895</u> --- until 1978, then <u>7895</u> ---	1961
<u>Spindle Shaper</u>		
Model 25	<u>1</u> -101 until 1965	1961
Model 26	<u>65</u> -100 until 1968, <u>826</u> --- until 1978, then <u>7826</u> ---	1965
<u>Sanders</u>		
Model 30	<u>0</u> -101 until 1968, <u>830</u> --- until 1977	1960
Model 30B	<u>630</u> --- until 1978, then <u>7830</u> ---	1976
Model 30A	<u>930A000</u> until 1977	1969
33	<u>0</u> -101 until 1978, <u>833</u> --- until 1977	1960
33B	<u>633</u> --- until 1978, then <u>7833</u> ---	1976
Model 35	<u>0</u> -101 until 1968, <u>835</u> --- until 1977	1963
Model 35B	<u>735</u> --- until 1978, then <u>7835</u> ---	1977
<u>Drill Presses</u>		
Model 1100	<u>5</u> -1000	1965
Model 1150	<u>4</u> -0001 until 1968, <u>815V</u> or S--- until 1976	1964
Model 1150A	<u>615V</u> or S--- until 1978, then <u>7815V</u> or S---	1976
<u>20" Planer\$</u>		
Model 2A	No serial numbers	1930
Model 220	<u>5100</u> up	1952
Model 221	<u>5</u> -5525 until 1965, <u>65</u> - until 1968, <u>822</u> --- until 1978, then <u>7822</u> ---	1955
<u>24" Planers</u>		
Model 2A	No serial numbers	1930
M 4	<u>5100</u> until 1955, then <u>8001</u>	1952
M .5	<u>8360</u> until 1960, <u>0</u> - until 1968, <u>825</u> --- until 1978, then <u>7825</u> ---	1957

*Prefix underlined changed yearly to match year